

## Changing and Loading Paper

1. Open the printer cover located on the top of the printer



2. A message displays on the screen that the paper is out. Touch **[OK]**
3. Remove the remaining paper by lifting the roll out of the printer compartment
4. Place the new roll of ticket stock in the printer compartment and roll out a couple of inches of paper from the bottom of the roll



5. Extend the paper past the printer compartment
6. Close the printer cover and push back the black lever

